

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.01.1407A1	1212-2401	24V	70A
B.A.01.0101A1	1212P-2501	24V	90A
B.A.01.0102A1	1212P-2502	24V	90A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0105A1	1212S-2501	24V	90A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0107A1	1212C-2502	24V	90A
B.A.01.0111A1	1212C-2506	24V	90A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0119A3	1226BL-4101	36-48V	90A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.01.6407A1	1228-2430	24V	70A
A.B.01.01.6411A2	1228-2901	24V	110A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.02.0427A1	1204M-4201	24-36V	275A
A.B.01.02.0527A1	1204M-5203	36-48V	275A
A.B.01.02.0632A1	1204M-6301	48-72V	325A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.02.1550A1	1205M-5603	36-48V	500A
A.B.01.02.1640A1	1205M-6B403	36-48V	400A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.02.3655A1	1221M-6701	48-72V	550A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0201A1	1207B-4102	24V	250A
B.A.01.0203A1	1207B-5101	24V	300A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.03.1550A1	1244-5561	36-48V	500A
A.B.01.03.1560A1	1244-5651	36-48V	600A
A.B.01.03.1660A1	1244-6661	48-84V	600A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.03.2527A1	1266A-5201	36-48V	275A
A.B.01.03.2535A1	1266R-5351	48V	350A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.03.3540A1	1268-5403	36-48V	400A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
LL01-Y201A	1520-5501	48V	500A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0301A1	1243-4220	24-36V	200A
B.A.01.0305A1	1243-4320	24-36V	300A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.04.1307A1	1222-5101	24-48V	70A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.04.1418A1	1232E-2121	24V	180A
A.B.01.04.1425A1	1232E-2321	24V	250A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.04.2535A1	1234E-5321	36-48V	350A
A.B.01.04.2535A2	1234-5371	36-48V	350A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.04.3545A1	1236-5401	36-48V	450A
A.B.01.04.3545A2	1236E-5421	36-48V	450A
A.B.01.04.3545A3	1236-5401	36-48V	450A
A.B.01.04.3640A1	1236-6401	48-80V	350A

Curtis Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.04.4565A1	1238-5601	36-48V	650A
A.B.01.04.4565A2	1238E-5621	36-48V	650A
A.B.01.04.4655A1	1238-6501	48-80V	550A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0101G1	1212 Series	24V	90A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0203G1	1207B Series	24V	300A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.1432G1	1204M Series	24-36V	275A
A.B.01.10.1532G1	1204M Series	36-48V	325A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.2550G1	1205M Series	36-48V	500A
A.B.01.10.2640G1	1205M Series	60-72V	400A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.4550G1	1215 Series	36-48V	500A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.4560G1	1219 Series	36-48V	600A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0305G1	1243 Series	24-36V	300A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.6560G1	1244 Series	36-48V	600A
A.B.01.10.6660G1	1244 Series	48-84V	600A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.0401G1	1230 Series	24V	250A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.01.10.7545G1	1236 Serie	36-48V	450A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.1201A1	H0	24V	230A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.04.01.2542A1	H2B	48V	420A
A.B.04.01.2560A1	H2B	48V	600A
A.B.04.01.2660A1	H2B	80V	600A

Motor Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.04.01.2542G1	H2G	48V	420A
A.B.04.01.2560G1	H2G	48V	600A
A.B.04.01.2660G1	H2G	80V	600A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
B.A.01.1401A1	AC-0	24V	150A
B.A.01.1405A3	AC-0	24V	200A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.04.03.1425A1	AC-1	24V	250A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.04.03.3545A1	AC-2	48V	450A
A.B.04.03.3650A1	AC-2	80V	500A

Zapi Controller (Drive)



LT#	Model Number	Voltage	Current
A.B.04.03.8535A1	ACE2	36-48V	350A
A.B.04.03.8540A1	ACE2	36-48V	400A
A.B.04.03.8545A1	ACE2	36-48V	450A
A.B.04.03.8550A1	ACE2	36-48V	500A

DRIVE CONTROLLER

01
PART

CONTROL SYSTEM PARTS

Zapi Controller (Drive)



[LT#:A.B.04.03.8545A2](#)

ACE2 36-48V/450A

GE Controller (Drive)
48V 450A



[LT#:A.B.02.02.0545A1](#)

IC3645SR4U454N4

GE Controller (Drive)
48V 600A



[LT#:A.B.02.02.0560A1](#)

IC3645SR4W606N6

GE Controller (Drive)
80V 450A



[LT#:A.B.02.02.0645A1](#)

IC3645SR7W455CH8

SME Power Module
36/48V 600A



[LT#:A.B.06.0107](#)

B00IV785B01

Used for Doosan/Baoli/Longgong

SME Power Module
80V 450A



[LT#:A.B.06.0115](#)

B00IV210B03

Used for Doosan/Baoli/Longgong

SME Power Module
48V 750A



[LT#:A.B.06.0127](#)

B00IV065B02

Used for Doosan/Baoli/Longgong

SME Control Box
36/48V



[LT#:A.B.06.0130](#)

E00IV414B01

Used for Doosan/Baoli/Longgong

SME Control Box
80V



[LT#:A.B.06.0134](#)

B00IV219B10

Used for Doosan/Baoli/Longgong

Inmotion Controller (Drive)
48V 350A



[LT#:A.B.07.4810](#)

ACS4810-350C

Used for Heli/Hangcha

Inmotion Controller (Drive)
48V 525A



[LT#:A.B.07.4825](#)

ACS48M-525C-35P

Used for Heli/Hangcha

Inmotion Controller (Drive)
80V 330A



[LT#:A.B.07.8015](#)

ACS8015-330C

Used for Heli/Hangcha

DRIVE CONTROLLER

01
PART

CONTROL SYSTEM PARTS

Inmotion Controller (Drive)
24-80V



[LT#:A.B.07.9001](#)

VMC20-C2

Used for Heli//Hangcha

Control Box
48V



[LT#:A.B.09.48001G1](#)

Used for Baoli/Longgong

Power Module
48V 550A



[LT#:A.B.09.4855G1](#)

Used for Baoli/Longgong

Sevcon Controller (Drive)
48V



[LT#:A.B.05.0401](#)

633T43801

Used for Hyundai

Sevcon Controller (Drive)
48V



[LT#:A.B.05.0115](#)

634A44101

Used for Hyundai /Feeler

Motor Controller (Drive)



[LT#:B.A.01.5011A1](#)

KEB48201X

Used for Xilin

CONTROL SYSTEM PARTS

IGBT

IGBT



[LT#:LL01-C013G](#)

181U2-62451

Used for Tcm

IGBT



[LT#:LL01-F001A](#)

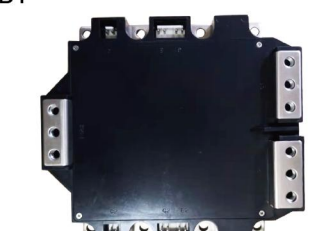 
1D600A-030

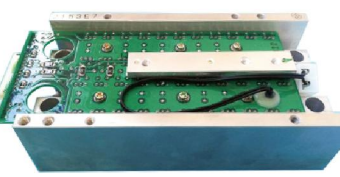 
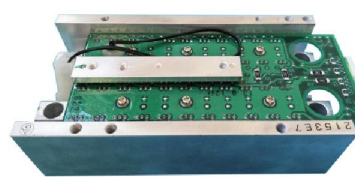 
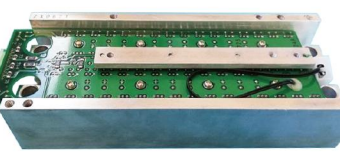 
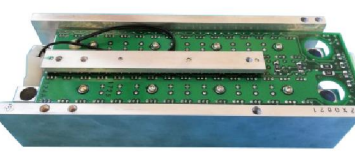 
IGBT



[LT#:LL01-F002A](#)

ETN36-030

IGBT  LT#:LL01-F004A ET439	IGBT  LT#:LL01-F005G 1M100H-025	IGBT  LT#:LL01-M001G CM600HN-5F Used for Tcm
IGBT  LT#:LL01-M002A QM500HA-H	IGBT  LT#:LL01-M003A CM100DU-12F	IGBT  LT#:LL01-M004A CM400DU-5F Used for Tcm/Nichiyu
IGBT  LT#:LL01-M006G FM600TU-07A Used for Nichiyu/Komatsu	IGBT  LT#:LL01-M009G CM600HN-5F Used for Mitsubishi/Tcm	IGBT  LT#:LL01-M010G RM250HC-5H Used for Mitsubishi
IGBT  LT#:LL01-M014G CM1400DU-24NF Used for Mitsubishi	IGBT  LT#:LL01-M015A 16A36-70080 Used for Mitsubishi	IGBT  LT#:LL01-M017G FM600TU-03A Used for Mitsubishi

IGBT  LT#:LL01-N002A 54001-94424 Used for Nichiyu	IGBT  LT#:LL01-N003A PB103-51E Used for Nichiyu	IGBT  LT#:LL01-T001A TSM002 Used for Nichiyu
IGBT  LT#:LL01-T006A 24550-33130-71 Used for Toyota	IGBT  LT#:LL01-T008A MG50J2YS50 Used for Toyota	IGBT  LT#:LL01-T009G TSM003 Used for Toyota
IGBT  LT#:LL02-C101G N61F30845A/B/D Used for Tcm	IGBT  LT#:LL02-C102G N61F30845A/B/D Used for Tcm	IGBT  LT#:LL02-C103G CM600HA-24A
IGBT  LT#:LL02-C104G 181N2-62441 Used for Tcm	IGBT  LT#:LL02-C105G 181N2-62451 Used for Tcm	IGBT  LT#:LL02-T001G 24550-23130-71 Used for Toyota